


# **TOSHIBA LIGHTING PRODUCTS (FRANCE) S.A**

# Specifications for InfraRed Halogen Heater Lamp

JHS 400V 3000W 315 BaH1
EM-2849

Date: 11-06-18

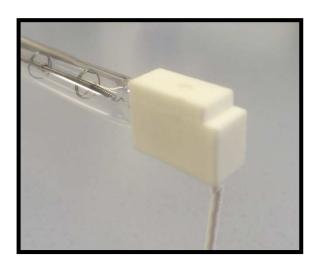

# **CUSTOMER AGREEMENT**

Section	IR Sales department		
Date	11/06/18		
Signature	C. Pégoraro		



## **TOSHIBA LIGHTING PRODUCTS (FRANCE) S.A**

#### Caution

- Use infrared heater lamp(s) with approved appliances with safety structure as well as safety devices.
- Avoid over voltage situation (cause of short lifetime and fire).
- Do not place an operating infrared heater lamp(s) close to flammable materials (cause of fire).
- Ensure the power supply is disconnected before accessing the infrared heater lamp(s) in alliances (caused of electric shock).
- Do not drop, hit, and stress infrared heater(s) and its wire-harnesses mounted with excessive force or vibration, and do not scratch infrared heater lamp glasses (cause of injure, breakage and short-circuit).
- In case of an infrared heater lamp(s) being broken, do not handle scattered glass fragments with bare hand (cause of injure).
- Do not use the infrared heater lamp(s) which is not explosion-proof product(s) under flammable gas or organic solvent environment (cause of explosion, ignition and fire).

#### Attention

- Infrared heater lamp(s) becomes extraordinarily hot to emit strong infrared radiations around their environment during operation. Ensure safety before the start of the operation.
- Operate the infrared heater lamp(s) inside the nominal voltage and maximum wattage density instructed (cause of short lifetime).
- Follow the infrared heater lamp(s) burning orientation strictly in its specifications (cause of short lifetime and fire).
- Never touch infrared heater lamp(s) in operation or even just after being operated (cause of skin burn).
- Do not use infrared heater lamp(s) under water, high humidity or corrosive environment (cause of short lifetime).
- Do not gaze an operating infrared heater(s) (cause of eye damage).

- In order to keep the quartz tube in good condition, do not handle infrared heater lamp(s) tube with bare hands. Use clean cloth impregnated with ethyl alcohol to wipe spot gently, if necessary (cause of short lifetime).
- Infrared heater lamp(s) shall be fixed and retained firmly inside appliances (cause of drop and breakage).
- Do not exceed permissible temperature of the wire-harnesses mounted on infrared heater lamp(s).
- Used infrared heater lamp(s) shall be disposed as an industrial waste on the user's responsibility.

#### Notice

- Consult when infrared heater lamp(s) is to be used in vacuum environment.
- Consult when infrared heater lamp(s) is to be operated at more than the recommended voltage in the article 3 (Operating infrared heater lamp(s) at a higher than nominal voltage causes a blackening on inner wall of glass tube by excess tungsten vapor. Paradoxically however operating lamp at a lower voltage leads to insufficient temperature of optimum value for the filament, and excess gas may damage the filament. Such operations may therefore result to shorten lamp life).
- Although there is some case to enable to observe a browning on the both end of infrared heater lamp (s) after use, this phenomena does not influence the performance of infrared heater lamp(s).
- The approval from the customer for the specifications, cautions, attentions and notices for the infrared heater lamp shall be completed in the date of the customer's signature in the front page or the issued date of order sheet from the customer whichever occurs first.



# **TOSHIBA LIGHTING PRODUCTS (FRANCE) S.A**

#### 1. Operating condition

- 1-1. Temperature at **sealing part**: Temperature at both sealing ends (in the quartz glass above the molybdenum foil center) shall be measured with thermo-couple and **must not exceed 350°C** (to avoid a loss of electrical conductivity caused by molybdenum foil oxidation)
- 1-2. Temperature at glass tube surface: 250 to 900°C
- 1-3. Operating atmosphere: Under normal atmosphere pressure, without corrosive or explosive or inflammable gas.
- 2. Storage environment
  - 2-1. Temperature range: -20°C MIN. 70°C MAX.
  - 2-2. Humidity range: 10%RH MIN 90%RHMAX without condensation.
  - 2-3. Under normal atmosphere pressure, without corrosive gas.

#### Warrantee

- 3-1. Warrantee period: One year after the invoiced date to the customer.
- 3-2. Condition of warrantee: In case of infrared heater lamp(s) with defect (defined as none-conformity to the specifications) is returned from the customer, during the warrantee period, TOSHIBA Lighting products (France) S.A., will compensate with re-delivering good infrared heater lamp(s). There is no obligation if the problem happened due to miss-design of appliances including safety design, miss-usage or miss handling of the infrared heater lamp(s). In case doubts rise up to judge none-conformity to the specifications, both parties shall corporate together to solve problems.


## Batch code information:

Batch code example

	A 0 6					
	/			_		
Month	Code		Year			
Jan	Α		2006			

Code			
Α			
В			
С			
D			
Е			
G			
Ι			
K			
L			
R			
S			
J			

Voor	Codo			
Year	Code			
2006	06			
2007	07			
2008	08			
2009	09			
2010	10			
2011	11			
2012	12			
2013	13			
2014	14			
2015	15			
2016	16			
Etc				

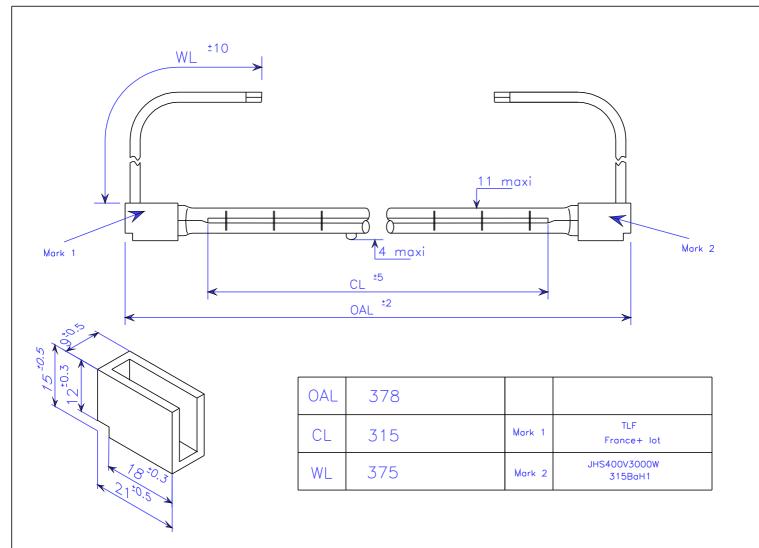

Wire: SILIFLON UL 1727 AWG 18 600V 250°C (white)
OMERIN or equivalent

Terminal: Splice RSB 7792.002V-1.5 STOCKO or equivalent

# **Specifications:**

Nominal voltage: 400 V Wattage: 3000 W ± 5%

Average life: 5000 Hrs (with AC power supply, 50 or 60 Hz,

continuously at room temperature and free from vibration)

Lighting position: Horizontal ± 4°

Tc 2550 K

## Strength test:

— Wire harness shall withstand tensile load of 5 Kgf in lamp axis direction.

- Insulator base shall withstand tensile load of 5 Kgf in lamp axis direction.

Type: InfraRed Halogen Lamp Heater			Modif.:	1	
JHS	HS 400V 3000W 315 BaH1			15/06/18	
Date:	TOSHIBA LIGTHING PRODUCTS	Version	Comments	►	
08-06-18	(France) S.A.	EM-2849		WL From to 375m	